

# Flexible Metal Hose Pump Connectors

## Vane Flex™

### INSTALLATION INSTRUCTIONS

**INSTALLATION:** The Vane Flex™ must be installed with flow traveling in the proper direction as indicated by the flow arrow.

Bolt, weld or thread the pump connector to the discharge connection to the pump. The weight of the piping is not to be supported by the flexible section of the connector. Do not exceed the lateral, angular, extension or compression limits of the connector. Flanged, weld, sweat or grooved end connections are to be used as dictated by adjacent piping.

CUSTOMER \_\_\_\_\_  
PROJECT \_\_\_\_\_  
ENGINEER \_\_\_\_\_  
ARCHITECT \_\_\_\_\_  
PRO. OR P.O. NO. \_\_\_\_\_



DESCRIPTION:

### Vane Flex Pump Connector

Installation Instructions

DRAWING BY:  
JT

DATE:  
08-09-06

DRAWING NO.  
VANE-INS