

## Metraflex Flanged Hose and Braid Pump Connector OPERATION, INSTALLATION AND MAINTENANCE INSTRUCTIONS

**General:** Metraflex flanged pump connectors are flexible metal hose pump connectors designed to minimize vibration and make up for pipe misalignment. They are available in three standard sizes and custom lengths. Please consult the factory submittals for specific performance specifications.

**Application:**

1. Pump connectors are designed to absorb vibration and lateral movement only. They are NOT designed for axial movement.
2. Pump connectors are available in a wide range of lengths and diameters. Each has its own performance characteristics. Confirm that the braided connector ratings for temperature, pressure, vacuum, and movements match the system requirements and that the material selected is chemically compatible with the process fluid or gas.
3. Pump connectors are not flow directional, unless optional flow conditioning vanes are included.

**Installation:**

1. Inspect pump connector for shipping damage, insure that the shipping bar is intact. Damaged joints should not be used.
2. Piping should be aligned as closely as possible, and within the allowed connector limit.
3. Unit lengths must not be altered during installation. Install at dimensions indicated on submittal drawings.
4. Piping must be properly supported so pump connectors do not carry any pipe loads.
5. Flange holes of the connector and adjacent pipe flange should be aligned properly. Do not try to compensate for flange or pipe misalignment by putting any torsional, compressive, extension, or offset loads on pump connector.

**Testing:**


1. Joint may be one-time pressure tested to 1-1/2 times the product's maximum operating pressure. Do not exceed maximum pressure or temperature during operation.
2. Metraflex recommends hydrostatic test with all air in the system removed. If an air test is performed, appropriate safety precautions must be made.

**Precautions:**

1. Connectors should not be installed in inaccessible areas where inspection is impossible.
2. Make sure proper drainage is available in the event of leakage when operating personnel are not available.
3. If welding near a braided connector, cover the unit with a weld blanket to keep weld splatter from damaging the braid cover.

**Maintenance:**

Pump Connectors have no serviceable parts and do not require maintenance. Metraflex recommends periodic inspection for leakage or damage such as dents or broken braid. If damaged, replace and do not use.

CUSTOMER _____ PROJECT _____ ENGINEER _____ ARCHITECT _____ PRO. OR P.O. NO. _____				
	DESCRIPTION: <b>Flanged Hose &amp; Braid Pump Connector</b> Operation, Installation and Maintenance Instructions			
	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 33%;">DRAWING BY: JC</td> <td style="width: 33%;">DATE: 12/18/12</td> <td style="width: 33%;">DRAWING NO. Flanged H&amp;B-OIM</td> </tr> </table>	DRAWING BY: JC	DATE: 12/18/12	DRAWING NO. Flanged H&B-OIM
DRAWING BY: JC	DATE: 12/18/12	DRAWING NO. Flanged H&B-OIM		